

DATA SHEET

"LOFT" INTELLIGENT ETHANOL FIREPLACE




1

1. Models & dimensions
2. Colors
3. Installations
4. Technical data
5. Operating Procedure

1. Models & dimensions




LOFT M

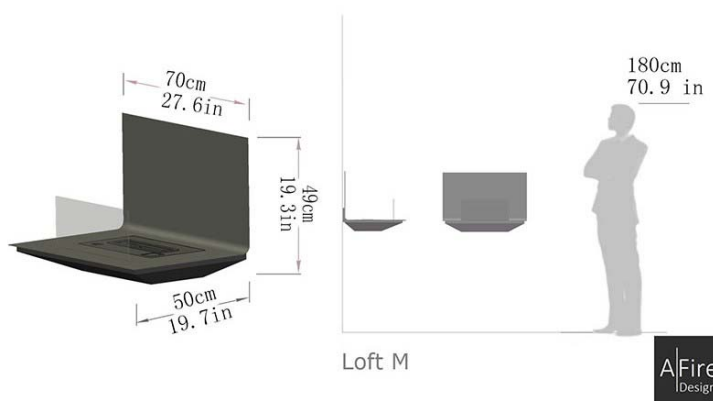

Dimensions W/H/D 70/49/50 cm – 27,6/19,3/19,7 in
 Output: 2 700 W (9 000 BTU)
 Capacity of the tank: 2,25 L (0,6 Gal)
 Consumption: 0,4 liter/hour (0,11 Gal/hour)
 Weight: 28 kg (62 Lbs.)

DATA SHEET

"LOFT" INTELLIGENT ETHANOL FIREPLACE

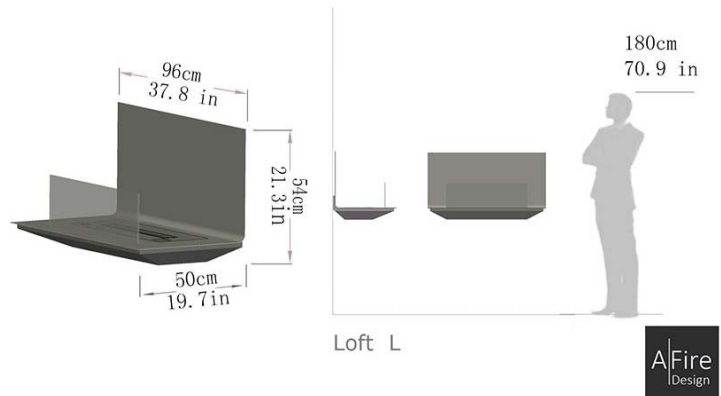

LOFT L

Dimensions W/H/D 96/54/50 cm - 37,8/21,3/19,7 in

Output: 3 750 W (13 000 BTU)


Capacity of the tank: 4 L (1,06 Gal)

Consumption: 0,60 liter/hour (0,16 Gal/hour)

Weight: 38 kg (84 Lbs.)

2. Colors


Satin Black

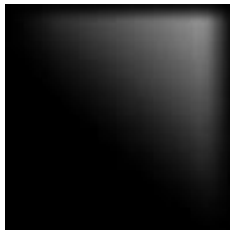

Satin White



Corten Effect

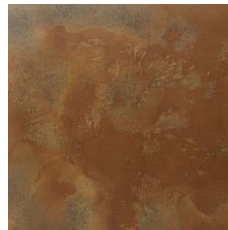

Stainless Steel



3. Installations

A. LOFT Wall-mounted Fireplace

Screw the supplied plate solidly to the wall. Hang on the fireplace on the wall



DATA SHEET

"LOFT" INTELLIGENT ETHANOL FIREPLACE

B. LOFT Embaddable Fireplace



3

Housing :

LOFT Medium

Front



Back

Minimum depth: 100 mm

LOFT Large

DATA SHEET

"LOFT" INTELLIGENT ETHANOL FIREPLACE

Front



4

Back

Minimum depth: 100 mm

C. LOFT Insertable Fireplace



4. Technical data

DATA SHEET

"LOFT" INTELLIGENT ETHANOL FIREPLACE



Controls

Remote control, On/off button

Dry contact for home automation applications & remote control via Smartphone or remote commands



Ignition - Power

Automatic and secured ignition through low-voltage electronic induction electrodes

Feed pumps with high-tech membranes



Security

Electronic sensors that automatically halt the unit in case of malfunction
(CO², heat, levels, tank gauge, etc.)



Standards

All Acquisitions devices comply with the following safety standards:

CE (Europe), FCC (USA), IC (Canada)

5. Operating procedure

DATA SHEET

"LOFT" INTELLIGENT ETHANOL FIREPLACE

A. Power supply

Connect the provided 12V adapter



6

B. Tank filling

Only use denatured ethanol 95 – 97%.

Press on the button **2**

The door is unlocked, open the door, remove the cap and fill the tank with a funnel.

When the tank is full, a beep warns you and a message is displayed on the LCD screen.

Put the cap back on and close the door of the tank.

After a few seconds the door will be automatically locked.



Never fill the burner directly, fill the ethanol tank

1. Press on the remote control, the on/off switch (**1**) or the remote button to ignite or switch off the burner



on/off switch



tank opening **2** **1** on/off switch



dry contact for home automation